



# **TS-700/1000 INVERTER**

## **Instruction Manual**



# TS-700/1000 Inverter Instruction Manual

## Index

---

|   |    |
|---|----|
| <b>1. Safety Guidelines</b> .....   | 1  |
| <b>2. Introduction</b> .....  | 1  |
| <b>2.1 Features</b> .....   | 1  |
| <b>2.2 Main Specification</b> .....   | 2  |
| <b>3. User Interface</b> .....  | 2  |
| <b>3.1 Front Panel</b> .....  | 2  |
| <b>3.2 LED Indicator on Front Panel</b> .....                                       | 3  |
| <b>3.3 Rear Panel</b> .....   | 3  |
| <b>4. Setup (Output Voltage, Frequency, and Saving Mode)</b> .....                  | 4  |
| <b>4.1 Initial State</b> .....  | 4  |
| <b>4.2 Procedure of Setting Up Output Voltage, Frequency, and Saving Mode</b> ..... | 4  |
| <b>5. Protection</b> .....  | 6  |
| <b>5.1 Input Protection</b> .....   | 6  |
| <b>5.2 Output Protection</b> .....  | 6  |
| <b>6. Installation &amp; Wiring</b> .....   | 7  |
| <b>7. Failure Correction Notes</b> .....  | 10 |
| <b>8. Warranty</b> .....  | 10 |

---

## 1.Safety Guidelines (Please read through this manual before assembling TS-700/1000)

- Risk of electrical shock and energy hazard. All failures should be examined by the qualified technician. Please do not remove the case of the inverter by yourself!
- Please do not install the inverter in places with high moisture or near water.
- Please do not install the inverter in places with high ambient temperature, under direct sunlight or near flame source.
- Please only connect batteries with the same brand and model number in one battery bank. Using batteries from different manufacturers or different capacity is strictly prohibited!
- Never allow a spark or flame in the vicinity of the batteries because it may generate explosive gases during normal operation.
- Make sure the air flow from the fan is not obstructed at both sides (front and back) of the inverter. Please allow at least 15cm of space.
- Please do not stack any object on the inverter.

**⚠ Warning: Batteries will have aging problem after years of operation. It is suggested to execute regular maintenance for the batteries every year. Once aged, the batteries should be changed by professional technician, or the failed batteries may cause explosion or fire hazard.**



Don't disassemble



 
Away from moisture



Away from fire or high temperature



Don't stack on the inverter



Keep good ventilation

**WARNING :** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## 2.Introduction

- Fully digital controlled by an advanced CPU, TS-700/1000 is a true sine wave DC/AC Inverter, Drawing power from battery bank and converting it into AC voltage.
- With pure sine wave output, TS-1000 can provide 1000W continuously, 1150W for 3 minutes, and surge power 2000W. (TS-700 can provide 700W continuously, 800W for 3 minutes, and surge power 1400W.) General applications include PC, ITE, vehicles, yachts, home appliances, motors, power tools, industrial control equipments, AV systems and etc...

### 2.1 Features

- True sine wave output (THD < 3.0% )
- 700W / 1000W rated output
- High efficiency up to 92%
- Complete LED indication for operation status
- Battery low alarm and indicator
- Output voltage / Frequency selectable

- Fully digital controlled including monitoring & display
- Compliance to UL458(only TS-1000) / FCC / E13 / CE
- Can be used for most electronic products with AC input
- 2 years global warranty

## 2.2 Main Specification

### TS-700

| Model                      | 112                                    | 124  | 148          | 212          | 224   | 248          |              |
|----------------------------|--|--|--------------|--------------|---|--------------|--------------|
| O<br>U<br>T<br>P<br>U<br>T | Rated power                            | 700W max. continuously, 800W max. for 180 seconds, 1050W max. for 10 seconds<br>1400W (30cycles) |              |              |   |              |              |
|                            | AC voltage                             | 110Vac, 60Hz (Factory setting)   |              |              | 230Vac, 50Hz (Factory setting)                    |              |              |
|                            |  | 100/110/115/120Vac (Selectable by setting button)  |              |              | 200/220/230/240Vac (Selectable by setting button) |              |              |
|                            |  | 50/60Hz (Selectable by setting button)   |              |              |   |              |              |
|                            | Waveform                               | True sine wave (THD <3.0%) at rated input voltage  |              |              |   |              |              |
| Protection                 | AC short · Overload · Over Temperature |  |              |              |   |              |              |
| I<br>N<br>P<br>U<br>T      | Bat. voltage range                     | 10.5 ~ 15.0V   | 21.0 ~ 30.0V | 42.0 ~ 60.0V | 10.5 ~ 15.0V                                      | 21.0 ~ 30.0V | 42.0 ~ 60.0V |
|                            | DC current                             | 75A  | 38A          | 19A          | 75A   | 38A          | 19A          |
|                            | Efficiency                             | 86%  | 88%          | 89%          | 89%   | 90%          | 91%          |
|                            | Off mode current draw                  | Under 1.0mA at power switch OFF  |              |              |   |              |              |
|                            | Protection                             | Over current · battery polarity reverse by fuse · battery low shutdown · battery low alarm       |              |              |   |              |              |

### TS-1000

| Model                      | 112                                    | 124  | 148          | 212          | 224   | 248          |              |
|----------------------------|--|--|--------------|--------------|---|--------------|--------------|
| O<br>U<br>T<br>P<br>U<br>T | Rated power                            | 1000W max. continuously, 1150W max. for 180 seconds, 1500W max. for 10 seconds<br>2000W (30cycles) |              |              |   |              |              |
|                            | AC voltage                             | 110Vac, 60Hz (Factory setting)   |              |              | 230Vac, 50Hz (Factory setting)                    |              |              |
|                            |  | 100/110/115/120Vac (Selectable by setting button)  |              |              | 200/220/230/240Vac (Selectable by setting button) |              |              |
|                            |  | 50/60Hz (Selectable by setting button)   |              |              |   |              |              |
|                            | Waveform                               | True sine wave (THD <3.0%) at rated input voltage  |              |              |   |              |              |
| Protection                 | AC short · Overload · Over Temperature |  |              |              |   |              |              |
| I<br>N<br>P<br>U<br>T      | Bat. voltage range                     | 10.5 ~ 15.0V   | 21.0 ~ 30.0V | 42.0 ~ 60.0V | 10.5 ~ 15.0V                                      | 21.0 ~ 30.0V | 42.0 ~ 60.0V |
|                            | DC current                             | 100A   | 50A          | 25A          | 100A  | 50A          | 25A          |
|                            | Efficiency                             | 88%  | 89%          | 90%          | 90%   | 91%          | 92%          |
|                            | Off mode current draw                  | Under 1.0mA at power switch OFF  |              |              |   |              |              |
|                            | Protection                             | Over current · battery polarity reverse by fuse · battery low shutdown · battery low alarm         |              |              |   |              |              |

## 3. User Interface

### 3.1 Front Panel

- Ⓐ **POWER ON/OFF switch:** The inverter will turn OFF if the switch is in the OFF position.
- Ⓑ **AC output outlet:** For application demands of different geographic areas all over the world, there are many different kinds of optional AC outlets to choose from.

- Ⓒ **Ventilation holes:** The inverter requires suitable ventilation to work properly. Please make sure there is good ventilation and the lifespan of the inverter can be preserved.
- Ⓓ **Function Setting:** Output voltage, frequency, and saving mode can be set through this button.
- Ⓔ **LED Indicating Panel:** Operating status, battery status, load condition, and all kinds of warnings will be displayed on this panel.

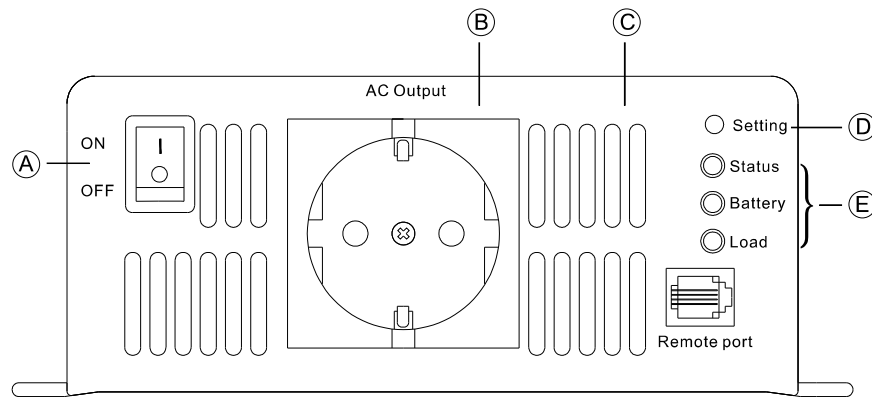


Figure 3.1: Front Panel

### 3.2 LED Indicator on Front Panel

Status LED: Represents current operating status

| LED color | Green  | Orange      | Red      |
|-----------|--------|-------------|----------|
| Status    | Normal | Saving mode | Abnormal |

\*Note: Refer to section 5.2 for explanation of abnormal status

Battery LED : Represents the remaining capacity of external batteries

| LED color        | Green | Orange   | Red  |
|------------------|-------|----------|------|
| Battery capacity | >70%  | 40 ~ 70% | <40% |

LOAD LED : Represents the magnitude of output load

| LED color       | Green | Orange   | Red  |
|-----------------|-------|----------|------|
| Load percentage | <50%  | 50 ~ 80% | >80% |

### 3.3 Rear Panel

- Ⓐ Battery input (+), (-)
- Ⓑ Fan ventilation opening
- Ⓒ Frame ground (FG)

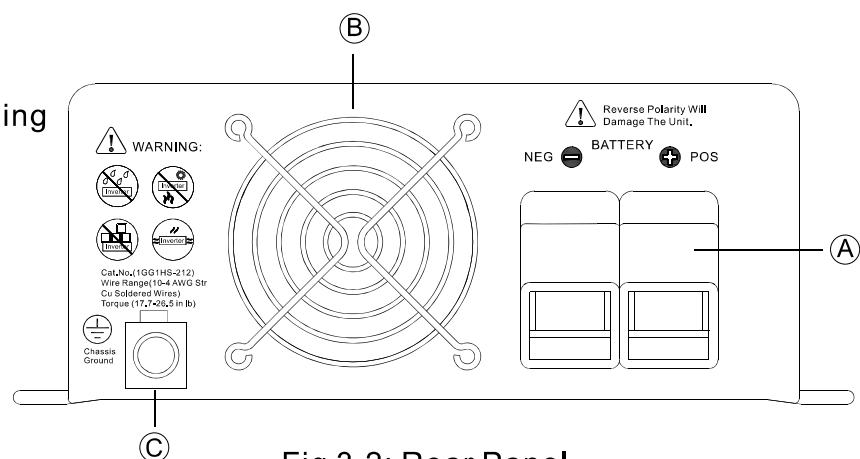


Fig 3.2: Rear Panel

## 4. Setup (Output Voltage, Frequency, and Saving Mode)

### 4.1 Initial State

The initial state is 110Vac/60Hz or 230Vac/50Hz and the "Saving Mode" is activated. If users need to revise it for certain application, it can be done the setting button on the front panel (Please refer to section 4.2). The unit will start up automatically after the setting procedure is finished and the new settings will be executed. These new settings will be kept even if the unit is power off/on for any reason.

### 4.2 Procedure of Setting up Output Voltage, Frequency, and Saving Mode

STEP 1: The inverter should be turned off while resetting. Input batteries should be connected and the loads should be removed.

STEP 2: Use an insulated stick to press the setting button and then turn on the power switch. Orange led indication will flash ON and OFF. after pressing for 5 seconds, the inverter will send out a "Beep" sound. Users can release the button and go into the setting procedure.

STEP 3: Please refer to Table 4-1 and check whether the combination of output voltage and frequency is the one you need. If yes, please jump to STEP 5. If not, start from STEP 4.

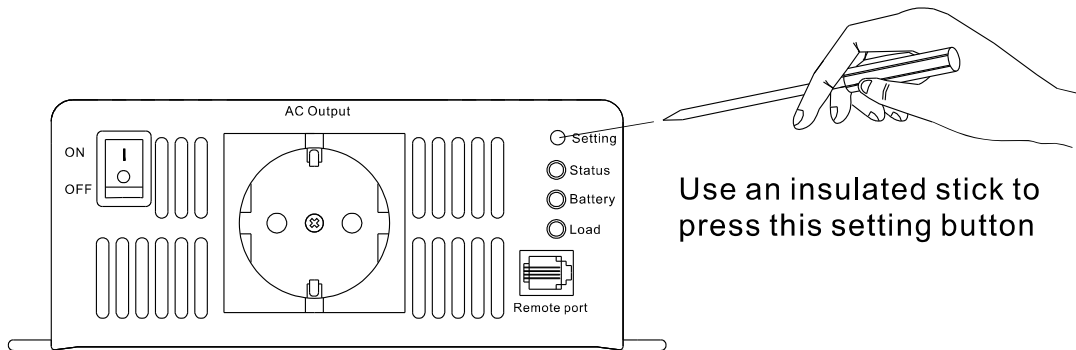


Figure 4.1: Adjustment of Output Voltage, Frequency, and Saving Mode

Table 4-1: LED Indication of Output Voltage / Frequency Combination

| Output Voltage / Frequency |         | 100Vac (200Vac) | 110Vac (220Vac) | 115Vac (230Vac) | 120Vac (240Vac) |
|----------------------------|---------|-----------------|-----------------|-----------------|-----------------|
|                            |         |                 |                 |                 |                 |
| 50Hz                       | Status  | ●               | ●               | ●               | ●               |
|                            | Battery | ○               | ○               | ●               | ●               |
|                            | Load    | ○               | ●               | ○               | ●               |
| 60Hz                       | Status  | ★               | ★               | ★               | ★               |
|                            | Battery | ○               | ○               | ●               | ●               |
|                            | Load    | ○               | ●               | ○               | ●               |

● Light  
○ Dark  
★ Flashing

Note: The above indication will be shown in green

STEP 4: The LEDs will change state each time you press the setting button for 1 second and then release (refer to Figure 4.2). Please select the suitable combination of output voltage and frequency you need.

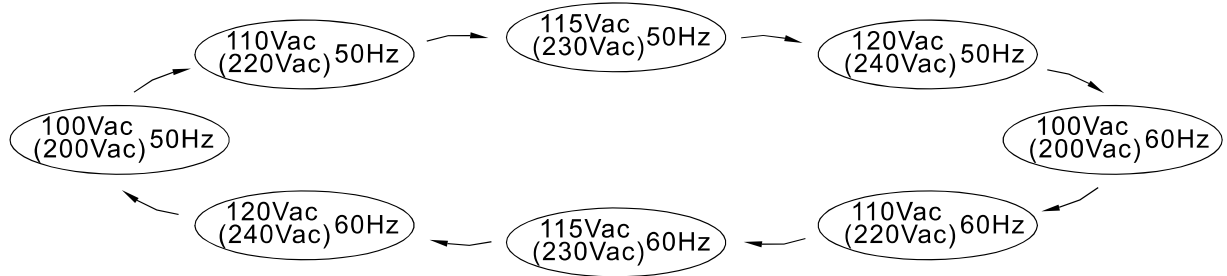


Figure 4.2: State Circulation Diagram of Output Voltage and Frequency

STEP 5: After selecting the output voltage and frequency, press the setting button for 3~5 seconds and the inverter will send out a "Beep" sound. The button can be released and it goes into the setting section of "Saving Mode".

STEP 6: Please refer to Table 4-2 and check whether the "Saving Mode" is already set as you desired. If yes, please jump to STEP 8. If not, start from STEP 7.

Table 4-2 : LED Indication of Saving Mode Selection

|                 |         |   |
|-----------------|---------|---|
| Saving Mode ON  | Status  | ★ |
|                 | Battery | ★ |
|                 | Load    | ● |
| Saving Mode OFF | Status  | ★ |
|                 | Battery | ★ |
|                 | Load    | ○ |

● Light  
○ Dark  
★ Flashing

Note: The above indication will be shown in green

STEP 7: The LEDs will change state each time you press the setting button for 1 second and then release. Please activate or cancel the "Saving Mode" function as desired.

STEP 8: After activating or canceling the "Saving Mode", press the setting button for around 5 seconds and the inverter will send out a "Beep" sound. The button can be released and all the settings are finished. The inverter will automatically store all the settings and start to operate.

## 5. Protection

### 5.1 Input Protection

**(A) Battery Polarity Protection:** If the battery input is connected in reverse polarity, the internal fuse of the inverter would blow and the inverter should be send back to MEAN WELL for repair.

**(B) Battery Under Voltage Protection:** When the battery voltage is lower than the preset value, the inverter will automatically terminate the output thus protect the battery from damage. Please refer to Table 5-1 for more detail about the failure signals.

**(C) Battery Over Voltage Protection:** When the battery voltage is too high, inverter will automatically terminate the output providing and the built-in buzzer will be activated to inform the users. Please refer to Table 6.1 for more detail about the failure signals.



#### **Warning:**

**Please choose suitable batteries that is compatible with the rated input DC voltage of TS-700/1000 (refer to the SPEC). If the input DC voltage is too low (ex. using 12Vdc battery bank for 24Vdc input models), TS-700/1000 can not be started up properly. If the input DC voltage is too high (ex. using 48Vdc battery bank for 24Vdc input models), TS-700/1000 will be damaged!**

### 5.2 Output Protection

The display panel will show failure status when inverter is faced with abnormal operating conditions (refer to Table 5-1). This lets the user know what could be the problem.

**(1) OTP:** When the internal temperature is higher than the limit value, the "Over Temperature Protection" will be activated. The unit will automatically turn off and should be restarted again.

**(2) AC output abnormal protection:** When the AC output voltage of the inverter is too high or too low, the unit will turn off and should be restarted again.

**(3) AC output short circuit protection:** When a short circuit situation occurs at the output side of the inverter or the loads increase greatly in a short period of time, the unit will turn off and should be restarted again.

**(4) Battery voltage abnormal protection:** When the battery voltage is too high or too low, this protection will be activated. The inverter will auto recover after the battery voltage go back to a safe level and users do not need to restart it.

**(5) OLP:** When output is overloaded between 735~800W(TS-700)/1050~1150W(TS-1000), the inverter can still continuously provide power for 3 minutes. After that, if the overload condition is not removed, overload protection will activate. When the load is higher than 1050W(TS-700)/1500W(TS-1000), the overload protection will be activated instantly. For these overload protections, once activated, the unit must reset to recover.



Table 5-1: Failure Messages On Front Panel

| Failure Message                 | LED Indicator | ○ Status  | Failure Message            | LED Indicator | ○ Status   |
|---------------------------------|---------------|-----------|----------------------------|---------------|------------|
|                                 |               | ○ Battery |                            |               | ○ Battery  |
|                                 |               | ○ Load    |                            |               | ○ Load     |
| Output Overload (105~115% load) |               | ○         | Abnormal AC Output Voltage |               | ★          |
|                                 |               | ○         |                            |               | ○          |
|                                 |               | ★         |                            |               | ★          |
| Output Overload (115~150% load) |               | ○         | AC Output Short Circuit    |               | ★          |
|                                 |               | ★         |                            |               | ★          |
|                                 |               | ○         |                            |               | ○          |
| Output Overload (150% load)     |               | ○         | Abnormal Battery Voltage   |               | ★          |
|                                 |               | ★         |                            |               | ★          |
|                                 |               | ★         |                            |               | ★          |
| Over Temperature                |               | ★         | LED Status                 |               | ● Light    |
|                                 |               | ○         |                            |               | ○ Dark     |
|                                 |               | ○         |                            |               | ★ Flashing |

Note: The above indication will be shown in red

## 6. Installation & Wiring

**(A)Wiring for Batteries:** Wire connections should be as short as possible and less than 1.5 meter is highly recommended. Make sure that suitable wires are chosen based on the rating of current. Too small of a cross-section will result in overheating that could induce certain danger. Please refer to Table 6-1 and consult our local distributors if you have any questions.

Table 6-1: Suggestion for Wire Selection

| Rated Current of Equipment (Amp) | Cross-section of Lead (mm <sup>2</sup> ) | AWG | Suggested wiring        |
|----------------------------------|--|-----|-------------------------|
| 16A ~ 25A                        | 2.5                                      | 12  | Model using 48V battery |
| 25A ~ 32A                        | 4  | 10  |                         |
| 32A ~ 40A                        | 6  | 8   |                         |
| 40A ~ 63A                        | 10                                       | 6   | Model using 24V battery |
| 63A ~ 80A                        | 16                                       | 4   |                         |
| 80A ~ 100A                       | 25                                       | 2   | Model using 12V battery |
| 100A ~ 125A                      | 35                                       | 1   |                         |
| ≥ 125A                           | 50                                       | 0   |                         |

### (B)Suggested battery type and capacity

| Battery type     | Lead-acid battery |     |              |     |              |     |
|------------------|-------------------|-----|--------------|-----|--------------|-----|
|                  | 112               | 212 | 124          | 224 | 148          | 248 |
| Battery Capacity | 12V / 120Ah ~     |     | 24V / 60Ah ~ |     | 48V / 30Ah ~ |     |
|                  | 12V / 400Ah       |     | 24V / 200Ah  |     | 48V / 100Ah  |     |

**(C) Requirement of Installation:**

The unit should be mounted on a flat surface or holding rack with suitable strength. In order to ensure the lifespan of the unit, please refrain from operating in environment of high dust or high moisture. This is a power supply with built-in DC fan. Please make sure that ventilation is not blocked. There should be no barriers within 15cm of the ventilating holes.


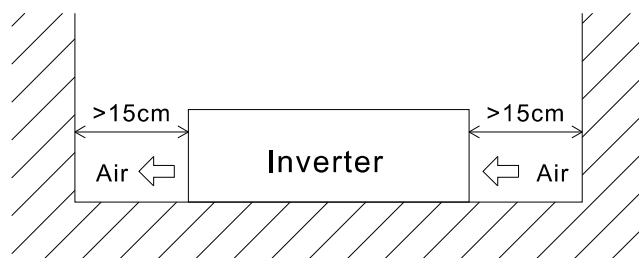



Figure 6.1: Example of Installation

**(D) Mounting Suggestion :**


There are 4 semi-circular cutout on the side flanges of the inverter. It can be used for fixing TS-700/1000 onto the system enclosure. We high recommend mounting in the horizontal position. Please make sure ventilation openings are free from obstruction.

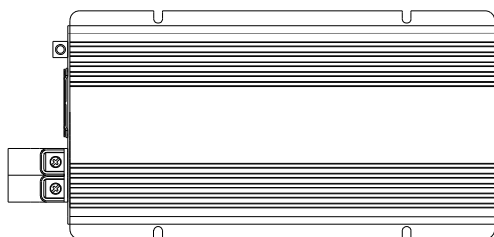


**(E) Example of system diagram**

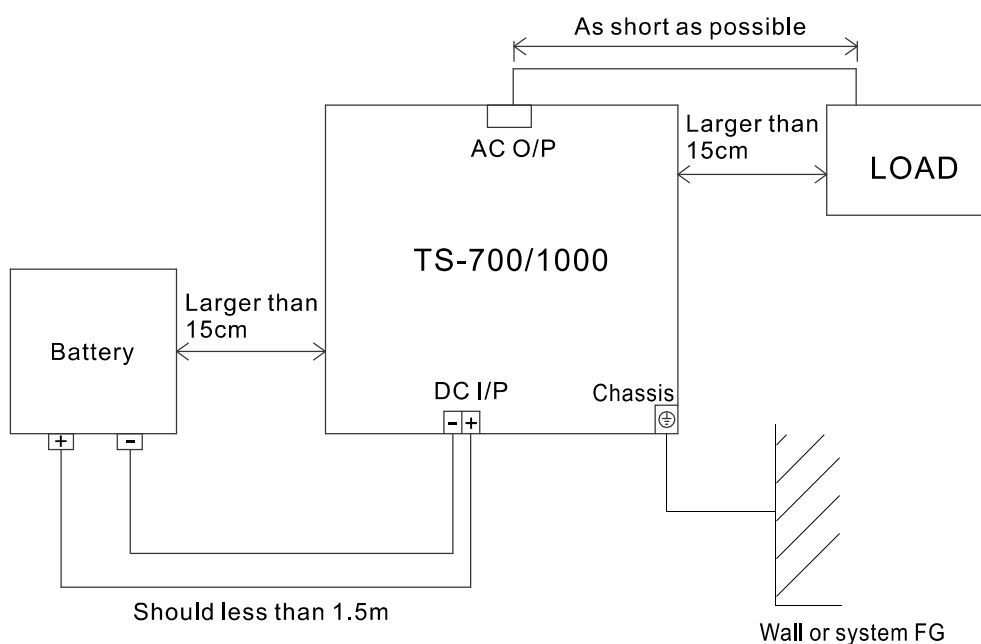

Where, the DC I/P and chassis fix manner as following :

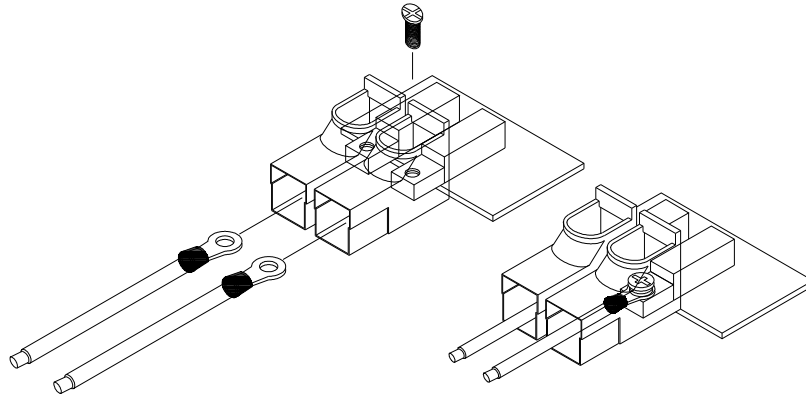

1. Company Name : Mean Well Enterprises Co Ltd
2. Model Name : 1GG1HS-191
3. Rating : 150A
4. Torque : 106.2 lb.in max.
5. Suitable Wire : Copper wire (temp rating : 75C )
6. Intended for termination onto a Listed ring tongue connector
7. To Be Sold Only With Installation Instructions
8. A mounting screw that is first inserted through the tang and is threaded into the connector to secure the connector to the tang shall be torqued to 32 in-lbs minimum
9. Mounting Screws - Plated Steel. Two provided, size M4

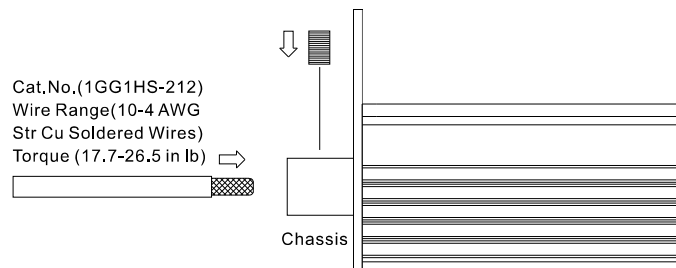

### (F) Derating

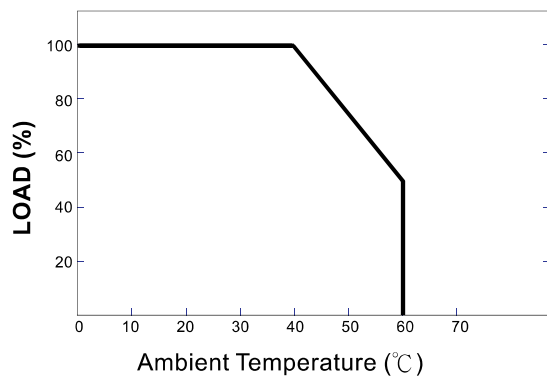


Figure 6.2: Output Derating Curve

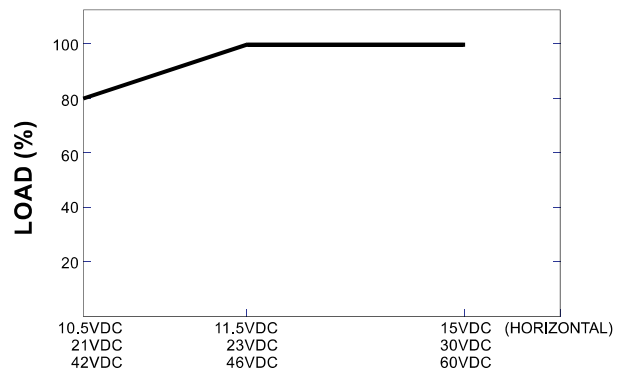


Figure 6.3: Input Derating Curve

### (G) ⚠ Notes on output load:

**TS-700/1000 Series can power most of equipments that need an AC source which can provide 700W(TS-700)/1000W(TS-1000) continuously. But for certain load type, the unit may not work properly.**

(1) Since inductive loads or motor based equipments need a large start up current (6~10 times of its rated current), the inverter may not start up successfully with these kinds of load.

(2) When the output are capacitive or rectified equipments (such as switching power supply), it is suggested to operate these equipment at no load or light load. To ensure proper operation, you should increase the loads only after TS-700/1000 has started up.

## 7. Failure Correction Notes

TS-700/1000 should be serviced by a professional technician. Any improper usage or modification may damage the unit or result in shock hazard. If you are not able to clear the failure condition, please contact Mean WELL or any of our distributors for repair service.

| Status                                       | Possible Reasons              | Ways to Eliminate   |
|--|-------------------------------|---|
| No AC output voltage                         | Abnormal input                | Check the AC or DC input sources. Make sure the voltage is within the required range.   |
|  | Over temperature protection   | Make sure that the ventilation is not blocked or whether the ambient temperature is too high. Please derating the output usage or reduce the ambient temperature. |
|  | Overload protection           | Make sure the output load does not exceed the rated value or the instantaneous start up current is not too high. (for inductive or capacitive loads)              |
|  | Short circuit protection      | Make sure the output is not overloaded or short circuited   |
| Discharging period of batteries is too short | Batteries are aged or broken  | Replace the batteries   |
|  | Battery capacity is too small | Reconfirm the specification and enlarge the battery capacity as suggested   |
| Fan does not spin                            | Clog with foreign bodies      | Remove the foreign objects  |
|  | Malfunction of the fan        | Repair required. Please send it back to us or any of our distributors   |

## 8. Warranty

**Two years of global warranty is provided for TS-700/1000 under normal operating conditions. Please do not change components or modify the unit by yourself or MEAN WELL may reserve the right not to provide the complete warranty.**

明緯企業股份有限公司

MEAN WELL ENTERPRISES CO., LTD.

248 台北縣五股工業區五權三路28號

No.28, Wu-Chuan 3rd Road, Wu Ku Ind. Park, Taipei Hsien, Taiwan, 248

Tel:886-2-2299-6100 Fax:886-2-2299-6200

<http://www.meanwell.com> E-mail:info@meanwell.com

*Your Reliable Power Partner*